



STS UNIT CONSOLE + POWER CORD

Connectivity scheme

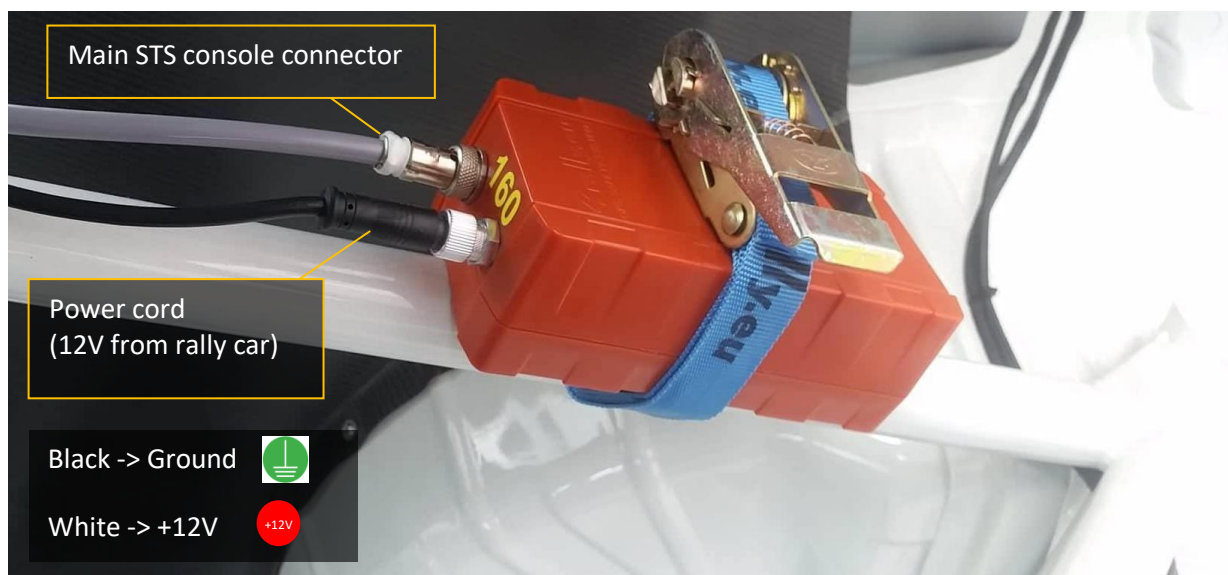



STS Installation scheme

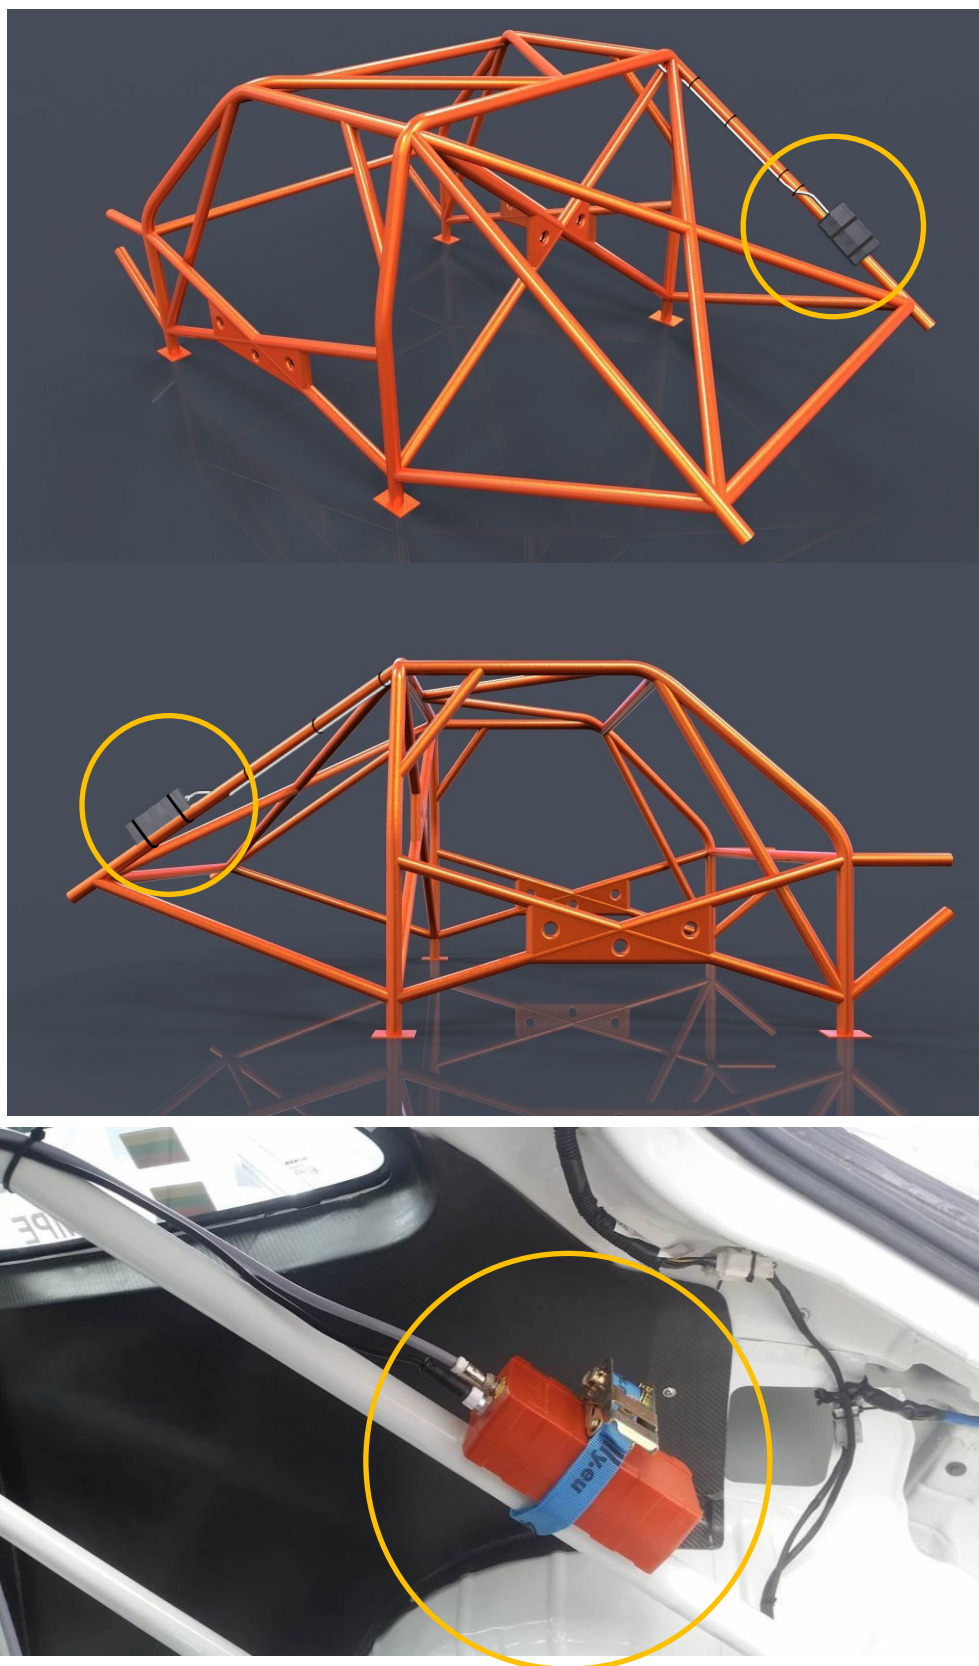

POWER CORD CONNECTION

(PLEASE CONNECT STS TO POWER ONLY IN RALLY CAR, DURING RECCE STS USE INTERNAL BATTERY)

